

GigaDevice Semiconductor Inc.

GD32F503R-START

Arm[®] Cortex[®]-M33 32-bit MCU

User Guide

Revision 1.1

(Feb. 2026)

Table of Contents

Table of Contents	1
List of Figures	3
List of Tables	4
1. Summary	5
2. Function Pin Assign	6
3. Getting started	7
4. Hardware layout overview.....	8
4.1. Power supply	8
4.2. Boot option	8
4.3. LED	8
4.4. KEY	9
4.5. USART.....	9
4.6. USB.....	10
4.7. GD-Link	10
4.8. Arduino.....	11
4.9. MCU	11
5. Routine use guide.....	12
5.1. GPIO_Runing_Led.....	12
5.1.1. DEMO Purpose.....	12
5.1.2. DEMO Running Result	12
5.2. GPIO_Key_Polling_mode.....	12
5.2.1. DEMO Purpose.....	12
5.2.2. DEMO Running Result	12
5.3. EXTI_Key_Interrupt_mode.....	13
5.3.1. DEMO Purpose.....	13
5.3.2. DEMO Running Result	13
5.4. USART_HyperTerminal_Interrupt.....	13
5.4.1. DEMO purpose	13
5.4.2. DEMO running result	13
5.5. TIMER_Breath_LED.....	14
5.5.1. DEMO Purpose.....	14
5.5.2. DEMO Running Result	14
5.6. CDC_ACM	14
5.6.1. DEMO_Purpose.....	14
5.6.2. DEMO Running Result	15
5.7. MSC_Host	15
5.7.1. DEMO_Purpose.....	15

5.7.2.	DEMO Running Result	15
6.	Revision history	16

List of Figures

Figure 4-1. Schematic diagram of power supply.....	8
Figure 4-2. Schematic diagram of boot option	8
Figure 4-3. Schematic diagram of LED function	8
Figure 4-4. Schematic diagram of Key function	9
Figure 4-5. Schematic diagram of USART	9
Figure 4-6. Schematic diagram of USB	10
Figure 4-7. Schematic diagram of GD-Link.....	10
Figure 4-8. Schematic diagram of Arduino	11
Figure 4-9. Schematic diagram of MCU.....	11

List of Tables

Table 2-1. Function pin assignment.....	6
Table 6-1. Revision history	16

1. Summary

GD32F503R-START uses GD32F503RGT6 as the main controller. It uses GD-Link Type-C interface to supply 5V power. Reset, Boot, Button key, LED, Type-C interface are also included. For more details, please refer to GD32F503R-START_Rev1.2 schematic.

2. Function Pin Assign

Table 2-1. Function pin assignment

Function	Pin	Description
LED	PC7	LED1
LED	PC8	LED2
LED	PC9	LED3
RESET	NRST	Reset
KEY	PA0	K2(Wakeup key)
USART	PA9	USART0_TX
	PA10	USART0_RX

3. Getting started

The START board uses GD-Link Type-C interface to get power DC +5V, which is the hardware system normal work voltage. A GD-Link on board is necessary in order to download and debug programs. Select the correct boot mode and then power on, the LEDPWR will turn on, which indicates the power supply is OK.


There are Keil version, IAR version and GD32EBuilder version of all projects. Keil version of the projects are created based on Keil MDK-ARM 5.29 uVision5. IAR version of the projects are created based on IAR Embedded Workbench for ARM 8.32.1 and GD32EBuilder version of the projects are created based on GD32 Embedded Builder_v1.5.5_Rel. During use, the following points should be noted:

1. If you use Keil uVision5 to open the project. In order to solve the "Device Missing (s)" problem, the latest version of GigaDevice.GD32F50x_DFP (URL: <https://www.gd32mcu.com>) should be installed to load related files.
2. If you use IAR to open the project, the latest version of IAR_GD32F50x_ADDON (URL: <https://www.gd32mcu.com>) should be installed to load related files.

4. Hardware layout overview


4.1. Power supply

Figure 4-1. Schematic diagram of power supply

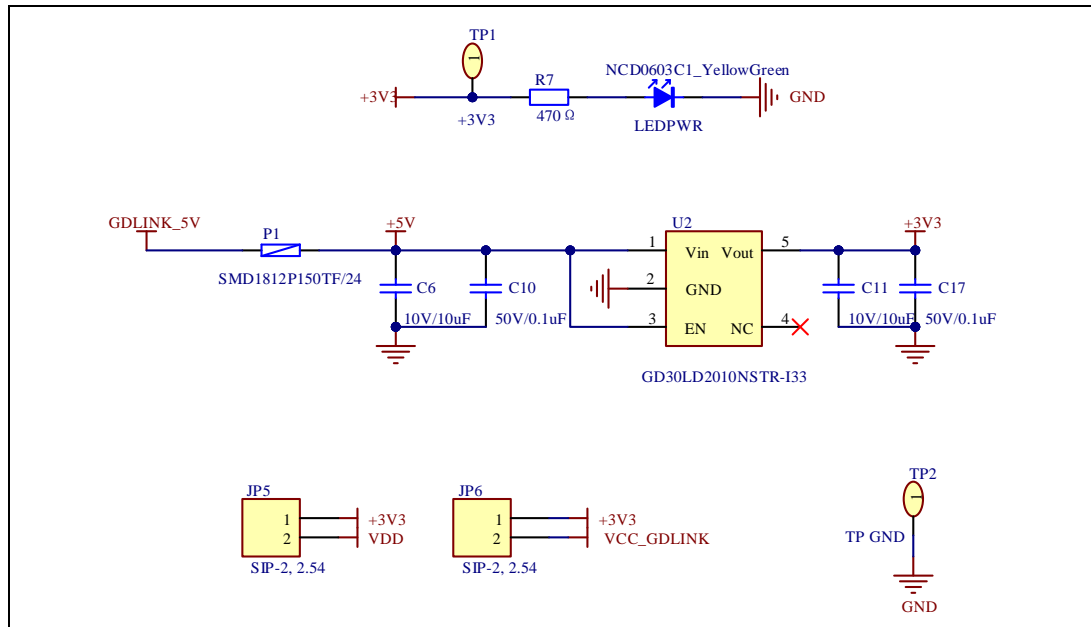


4.2. Boot option

Figure 4-2. Schematic diagram of boot option

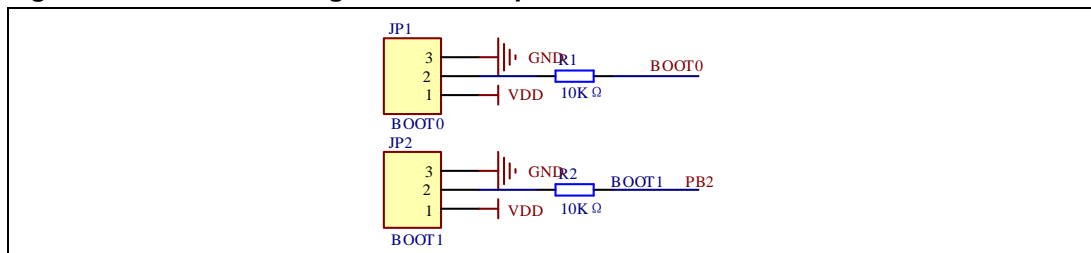


4.3. LED

Figure 4-3. Schematic diagram of LED function

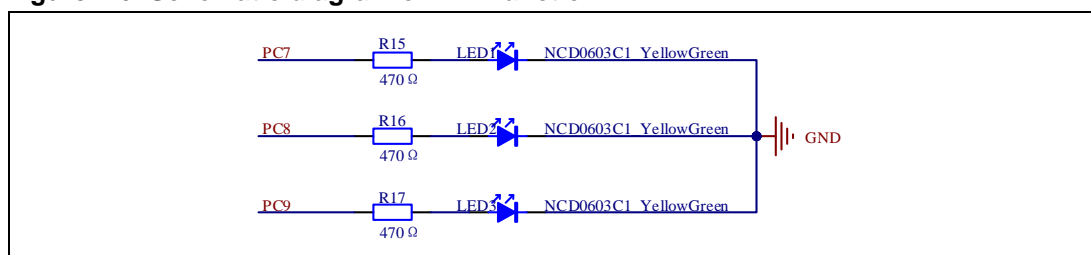


4.4. KEY

Figure 4-4. Schematic diagram of Key function

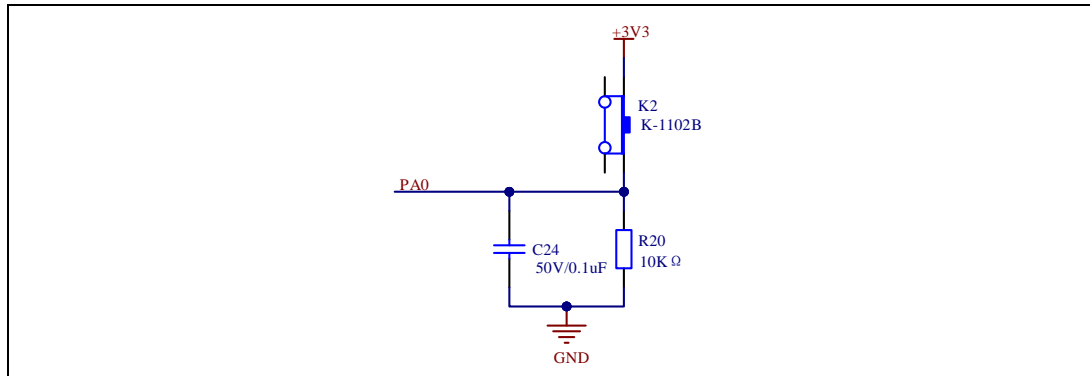


4.5. USART

Figure 4-5. Schematic diagram of USART

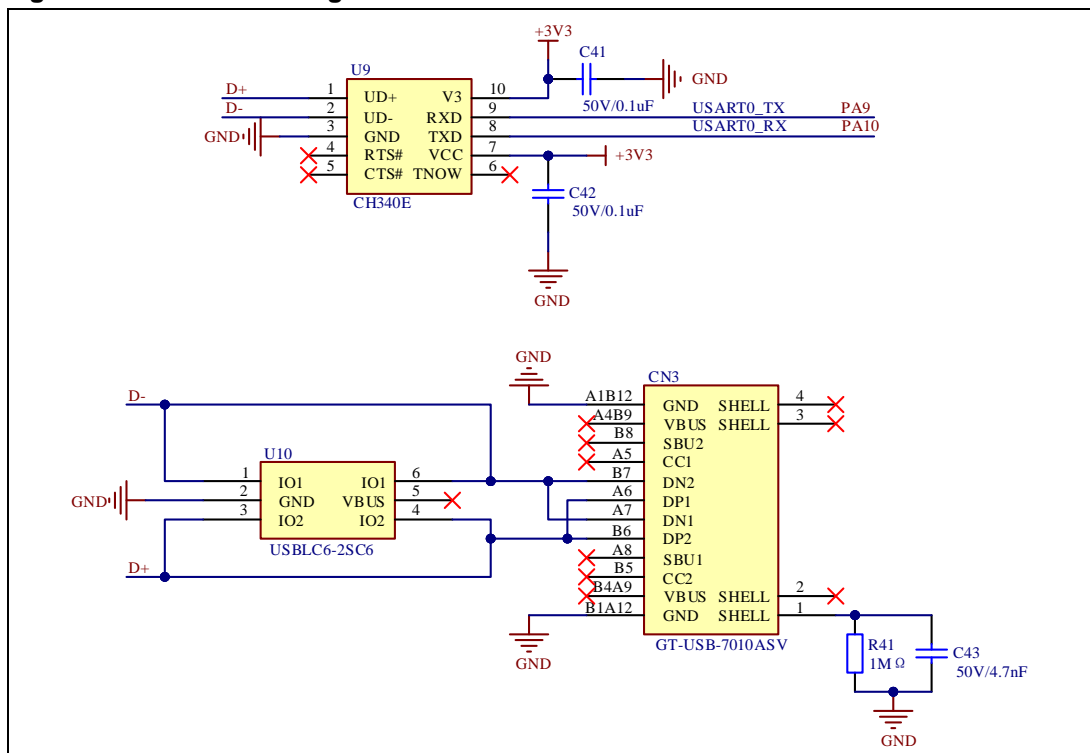


4.6. USB

Figure 4-6. Schematic diagram of USB

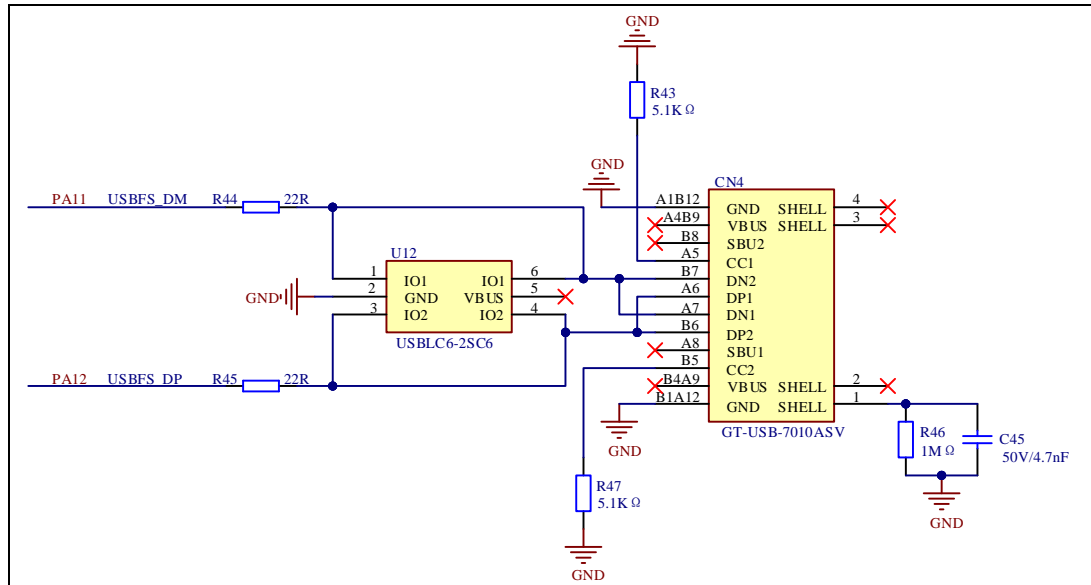


4.7. GD-Link

Figure 4-7. Schematic diagram of GD-Link

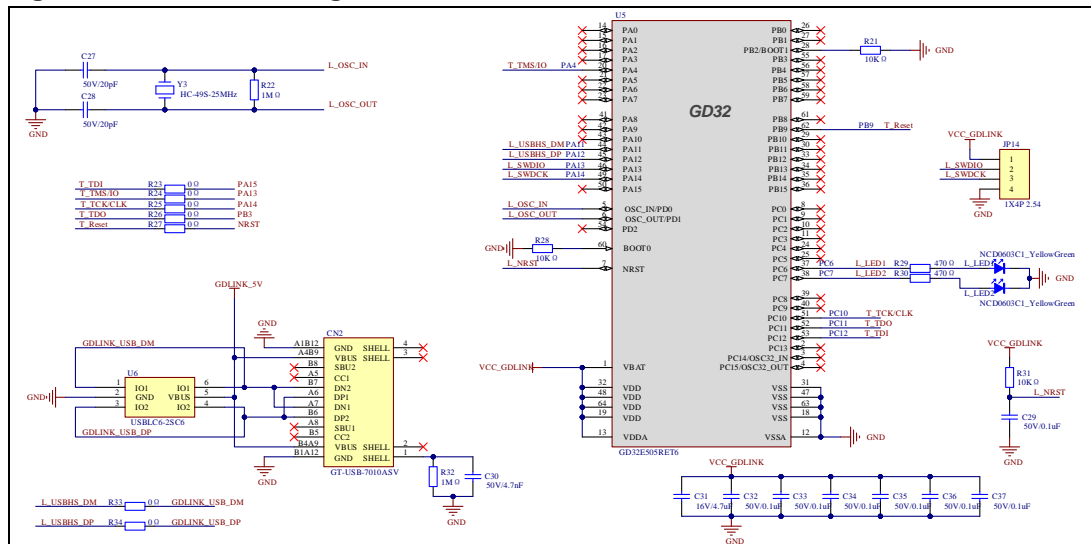


4.8. Arduino

Figure 4-8. Schematic diagram of Arduino

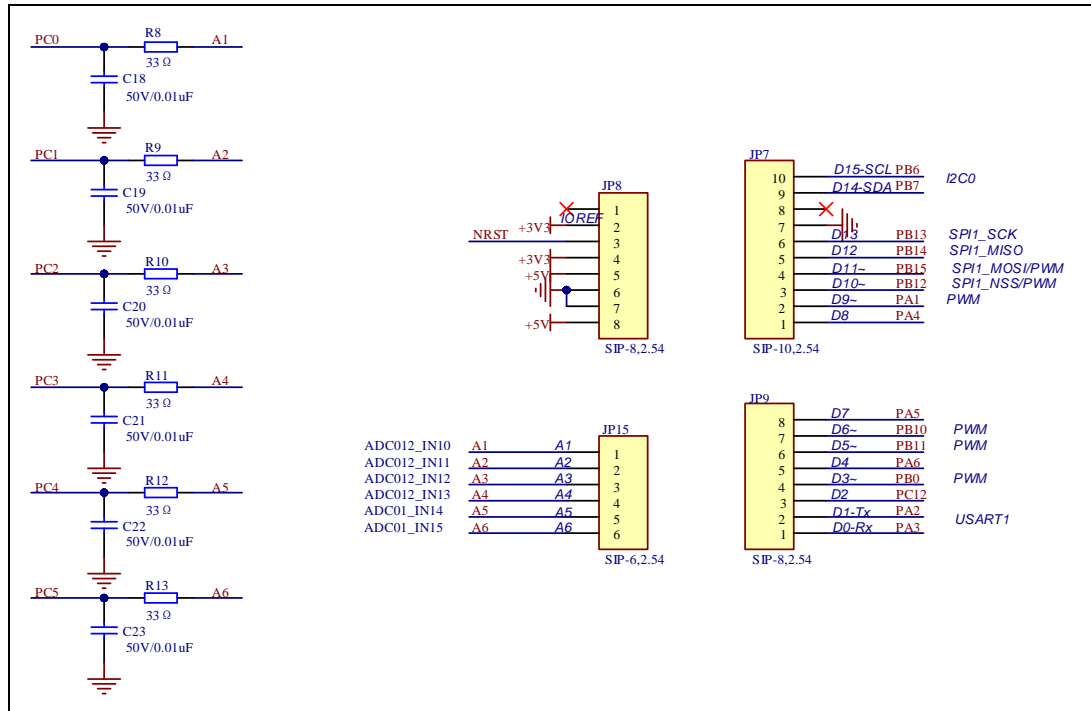

4.9. MCU

Figure 4-9. Schematic diagram of MCU

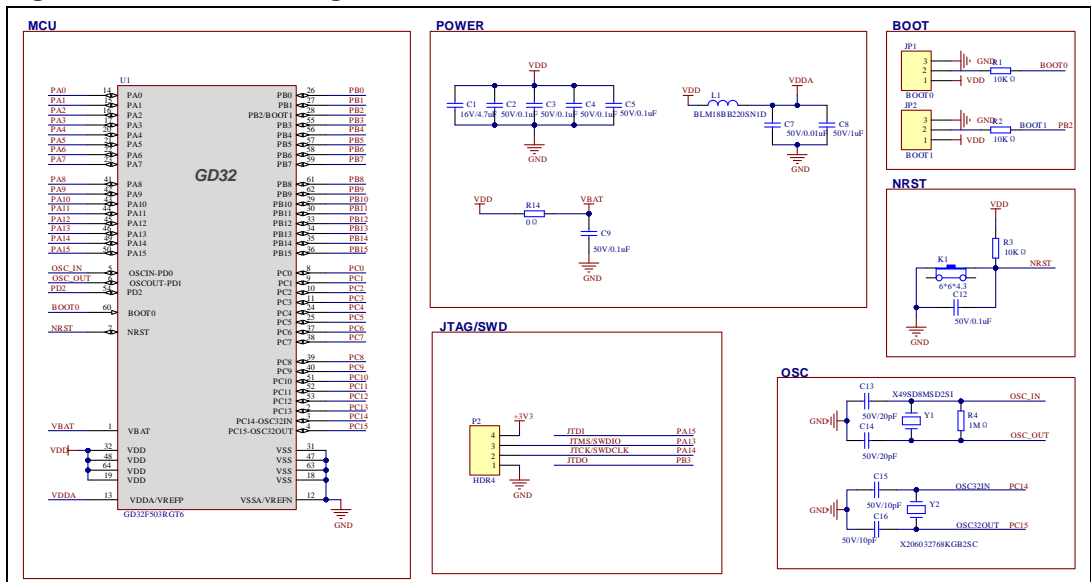

5. Routine use guide

5.1. GPIO_Runing_Led

5.1.1. DEMO Purpose

This demo includes the following functions of GD32 MCU:

- Learn to use GPIO control the LED
- Learn to use SysTick to generate 1ms delay

GD32F503R-START board has three LEDs. The LED1, LED2, LED3 are controlled by GPIO. This demo will show how to light the LEDs.

5.1.2. DEMO Running Result

Download the program <01_GPIO_Running_Led> to the START board, LED1, LED2, LED3 will turn on in sequence with interval of 500ms, and turn off together, 500ms later, repeat the process.

5.2. GPIO_Key_Polling_mode

5.2.1. DEMO Purpose

This demo includes the following functions of GD32 MCU:

- Learn to use GPIO control the LED and the KEY
- Learn to use SysTick to generate 1ms delay

GD32F503R-START board has two keys and three LEDs. The two keys are Reset key, Wakeup key. The LED1, LED2, LED3 are controlled by GPIO.

This demo will show how to use the Wakeup key to control the LED1. When press down the Wakeup Key, it will check the input value of the IO port. If the value is 0 and will wait for 50ms. Check the input value of the IO port again. If the value still is 0, it indicates that the button is pressed successfully and toggle LED1.

5.2.2. DEMO Running Result

Download the program <02_GPIO_Key_Polling_mode> to the START board, press down the Wakeup Key, LED1 will be turned on. Press down the Wakeup Key again, LED1 will be turned off.

5.3. EXTI_Key_Interrupt_mode

5.3.1. DEMO Purpose

This demo includes the following functions of GD32 MCU:

- Learn to use GPIO control the LED and the KEY
- Learn to use EXTI to generate external interrupt

GD32F503R-START board has two keys and three LEDs. The two keys are Reset key, Wakeup key. The LED1, LED2, LED3 are controlled by GPIO.

This demo will show how to use the EXTI interrupt line to control the LED1. When press down the Wakeup Key, it will produce an interrupt. In the interrupt service function, the demo will toggle LED1.

5.3.2. DEMO Running Result

Download the program <03_EXTI_Key_Interrupt_mode> to the START board, LED1 is turned on and off for test. When press down the Wakeup Key, LED1 will be turned on. Press down the Wakeup Key again, LED1 will be turned off.

5.4. USART_HyperTerminal_Interrupt

5.4.1. DEMO purpose

This demo includes the following functions of GD32 MCU:

- Learn to use the USART transmit and receive interrupts to communicate with the HyperTerminal.

5.4.2. DEMO running result

Download the program <04_USART_HyperTerminal_Interrupt> to the EVAL board and connect serial cable to USART. Firstly, the LED1、LED2、LED3 is turned on and off for test. Then, the USART sends the tx_buffer array (from 0x00 to 0xFF) to the hyperterminal and waits for receiving data from the hyperterminal that you must send. The string that you have sent is stored in the rx_buffer array. The receive buffer have a BUFFER_SIZE bytes as maximum. After that, compare tx_buffer with rx_buffer. If the tx_buffer is the same with the rx_buffer, LED1, LED2, LED3 light by turns. Otherwise, LED1, LED2, LED3 toggle together.

The output information via the HyperTerminal is as following:

```

00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10 11 12 13 14 15 16 17 18 19 1A
1B 1C 1D 1E 1F 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30 31 32 33 34 35
36 37 38 39 3A 3B 3C 3D 3E 3F 40 41 42 43 44 45 46 47 48 49 4A 4B 4C 4D 4E 4F 50
51 52 53 54 55 56 57 58 59 5A 5B 5C 5D 5E 5F 60 61 62 63 64 65 66 67 68 69 6A 6B
6C 6D 6E 6F 70 71 72 73 74 75 76 77 78 79 7A 7B 7C 7D 7E 7F 80 81 82 83 84 85 86
87 88 89 8A 8B 8C 8D 8E 8F 90 91 92 93 94 95 96 97 98 99 9A 9B 9C 9D 9E 9F A0 A1
A2 A3 A4 A5 A6 A7 A8 A9 AA AB AC AD AE AF B0 B1 B2 B3 B4 B5 B6 B7 B8 B9 BA BB BC
BD BE BF C0 C1 C2 C3 C4 C5 C6 C7 C8 C9 CA CB CC CD CE CF D0 D1 D2 D3 D4 D5 D6 D7
D8 D9 DA DB DC DD DE DF E0 E1 E2 E3 E4 E5 E6 E7 E8 E9 EA EB EC ED EE EF F0 F1 F2
F3 F4 F5 F6 F7 F8 F9 FA FB FC FD FE FF

```

5.5. TIMER_Breath_LED

5.5.1. DEMO Purpose

This demo includes the following functions of GD32 MCU:

- Learn to use Timer output PWM wave
- Learn to update channel value

5.5.2. DEMO Running Result

Download the program <05_TIMER_Breath_LED > to the GD32F503R-START board and run. PC7 should not be reused by other peripherals.

When the program is running, you can see LED1 lighting from dark to bright gradually and then gradually darken, ad infinitum, just like breathing as rhythm.

 
5.6. CDC_ACM

5.6.1. DEMO_Purpose

This demo includes the following functions of GD32 MCU:


- Learn how to use the USBFS peripheral
- Learn how to implement USBFS CDC device

GD32F503R-START board has one USBFS interface. In this demo, the GD32F503R-START board is enumerated as an USB virtual COM port, which was shown in device manager of PC as below. This demo makes the USB device look like a serial port, and loops back the contents of a text file over USB port. To run the demo, input a message using the PC's keyboard. Any data that shows in HyperTerminal is received from the device.

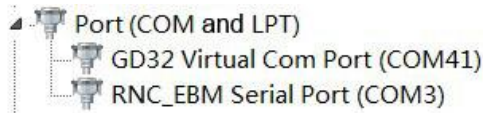

5.6.2. DEMO Running Result

Download the program < 06_USB_FS\USB_Device_CDC > to the EVAL board and run. When you input message through computer keyboard, the HyperTerminal will receive and shown the message. For example, when input “GigaDevice MCU”, the HyperTerminal will get and show it as below.



```
GigaDevice MCU
```

5.7. MSC_Host

5.7.1. DEMO_Purpose

This demo includes the following functions of GD32 MCU:

- Learn to use the USBFS as a MSC host
- Learn the operation between the MSC host and the Udisk

GD32F503R-START-V1.2 board integrates the USBFS module, and the module can be used as a USB device or a USB host. This demo mainly shows how to use the USBFS as a USB MSC host to communicate with external Udisk.

5.7.2. DEMO Running Result

Insert the OTG cable to the USB port, download the program <06_USB_FS\USB_Host_MSC > to the board and run.

If an Udisk has been attached, the user will see the information of Udisk enumeration, the Udisk information, and the root content of the Udisk, then the host will write file to the Udisk, finally the user will see information that the msc host demo is end.

6. Revision history

Table 6-1. Revision history

Revision No.	Description	Date
1.0	Initial Release	Dec.08, 2025
1.1	The USB section adds power supply for the host	Feb.25, 2026

Important Notice

This document is the property of GigaDevice Semiconductor Inc. and its subsidiaries (the "Company"). This document, including any product of the Company described in this document (the "Product"), is owned by the Company according to the laws of the People's Republic of China and other applicable laws. The Company reserves all rights under such laws and no Intellectual Property Rights are transferred (either wholly or partially) or licensed by the Company (either expressly or impliedly) herein. The names and brands of third party referred thereto (if any) are the property of their respective owner and referred to for identification purposes only.

To the maximum extent permitted by applicable law, the Company makes no representations or warranties of any kind, express or implied, with regard to the merchantability and the fitness for a particular purpose of the Product, nor does the Company assume any liability arising out of the application or use of any Product. Any information provided in this document is provided only for reference purposes. It is the sole responsibility of the user of this document to determine whether the Product is suitable and fit for its applications and products planned, and properly design, program, and test the functionality and safety of its applications and products planned using the Product. The Product is designed, developed, and/or manufactured for ordinary business, industrial, personal, and/or household applications only, and the Product is not designed or intended for use in (i) safety critical applications such as weapons systems, nuclear facilities, atomic energy controller, combustion controller, aeronautic or aerospace applications, traffic signal instruments, pollution control or hazardous substance management; (ii) life-support systems, other medical equipment or systems (including life support equipment and surgical implants); (iii) automotive applications or environments, including but not limited to applications for active and passive safety of automobiles (regardless of front market or aftermarket), for example, EPS, braking, ADAS (camera/fusion), EMS, TCU, BMS, BSG, TPMS, Airbag, Suspension, DMS, ICMS, Domain, ESC, DCDC, e-clutch, advanced-lighting, etc.. Automobile herein means a vehicle propelled by a self-contained motor, engine or the like, such as, without limitation, cars, trucks, motorcycles, electric cars, and other transportation devices; and/or (iv) other uses where the failure of the device or the Product can reasonably be expected to result in personal injury, death, or severe property or environmental damage (collectively "Unintended Uses"). Customers shall take any and all actions to ensure the Product meets the applicable laws and regulations. The Company is not liable for, in whole or in part, and customers shall hereby release the Company as well as its suppliers and/or distributors from, any claim, damage, or other liability arising from or related to all Unintended Uses of the Product. Customers shall indemnify and hold the Company, and its officers, employees, subsidiaries, affiliates as well as its suppliers and/or distributors harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of the Product.

Information in this document is provided solely in connection with the Product. The Company reserves the right to make changes, corrections, modifications or improvements to this document and the Product described herein at any time without notice. The Company shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them. Information in this document supersedes and replaces information previously supplied in any prior versions of this document.